
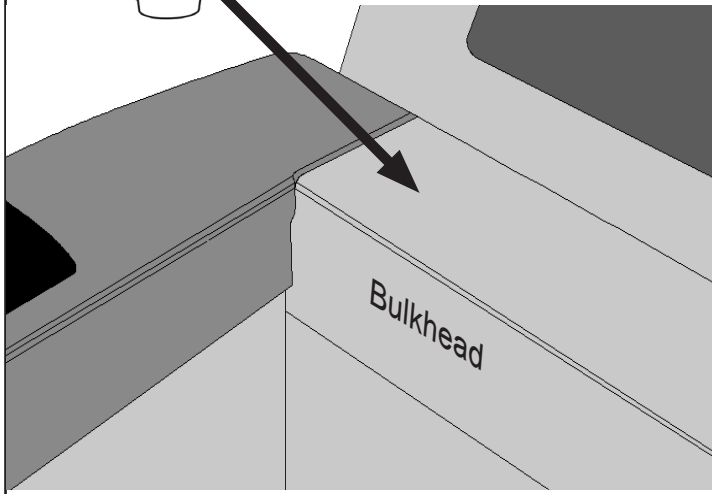


# BULKHEAD SEAL INSTALLATION


- 1** Thoroughly clean and dry bulkhead area where seal will be applied.




 For best results, clean the bulkhead surface with isopropyl alcohol after cleaning with soap and water.




- 2** Apply seal to top of bulkhead: The upward angle of seal will be positioned flush to the inside face of bulkhead.

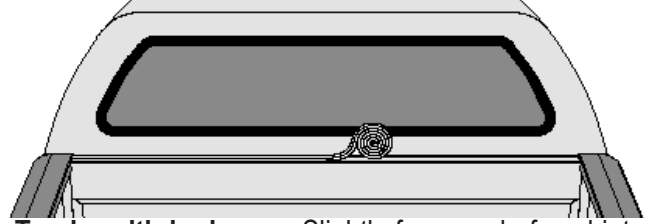


**Trucks with bed caps:** Slightly force end of seal into the bed cap to prevent a gap for water to enter.

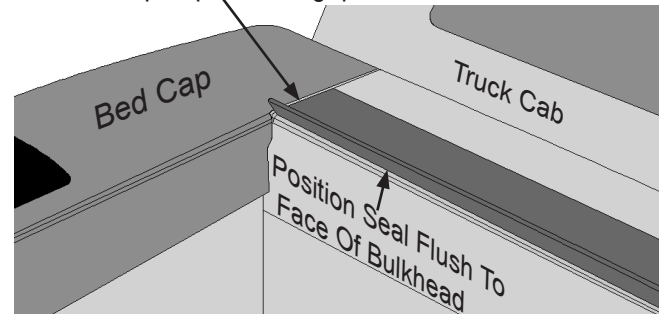

 For best results apply seal straight as possible along entire edge of bulkhead.

- 3** **Install side rails:** Position rail end plug seal against the upward angle of bulkhead seal as shown.

Side Rail End Plug seal

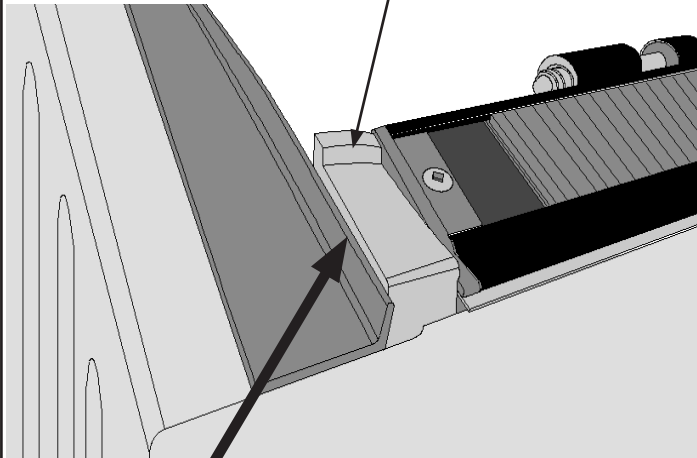

Upward angle of bulkhead seal should meet flush with the side rail end plug seal. Try to position rail assembly so no gap is visible between the two seals.

- 4** Refer to owner manual for complete installation instruction.

**Note:**

-Bulkhead seal may not work with some drop in plastic bedliners that cover the trucks entire bulkhead.

-Bulkhead seal may not adhere properly to some spray in bedliners. an adhesive promoter may be needed for seal to adhere properly.