



NISSAN FRONTIER INSTALLATION

Before installing your tonneau system, install cab seal and additional bulkhead seal as shown below.

STEP 1: Install cab seal inside front bulkhead, covering full width of bulkhead. Align top edge of seal flush with top edge of bulkhead. Slowly peel backing and press seal against bulkhead to bond adhesive.

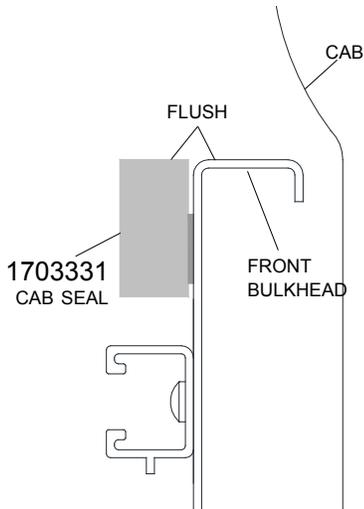

STEP 2A: Apply additional bulkhead seal provided directly underneath of the factory bulkhead seal on the front header, trim ends flush. **STEP 2B:** Position cab header over front bulkhead and cab seal as shown below. Install your tonneau cover as shown in owner's manual.

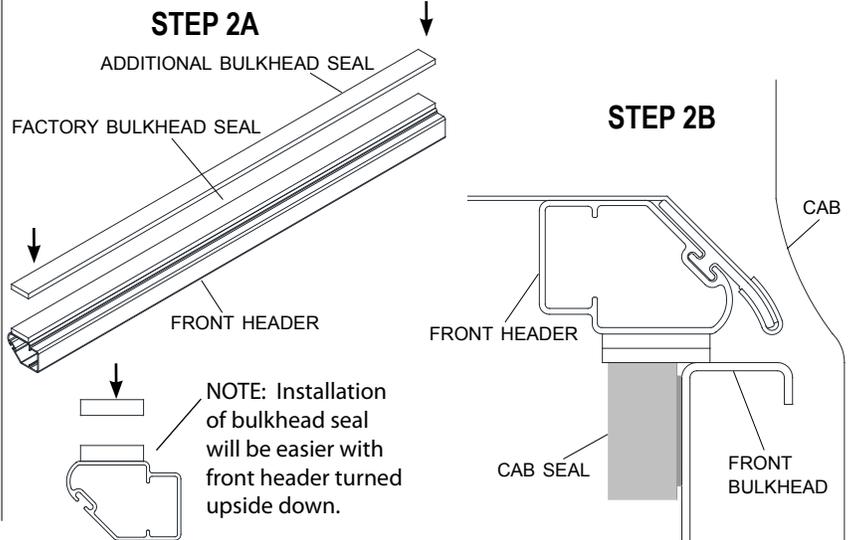


P/N 1116774 Rev. D


NISSAN FRONTIER INSTALLATION

Before installing your tonneau system, install cab seal and additional bulkhead seal as shown below.

STEP 1: Install cab seal inside front bulkhead, covering full width of bulkhead. Align top edge of seal flush with top edge of bulkhead. Slowly peel backing and press seal against bulkhead to bond adhesive.

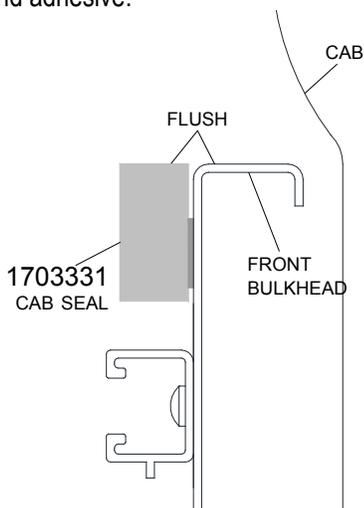

STEP 2A: Apply additional bulkhead seal provided directly underneath of the factory bulkhead seal on the front header, trim ends flush. **STEP 2B:** Position cab header over front bulkhead and cab seal as shown below. Install your tonneau cover as shown in owner's manual.

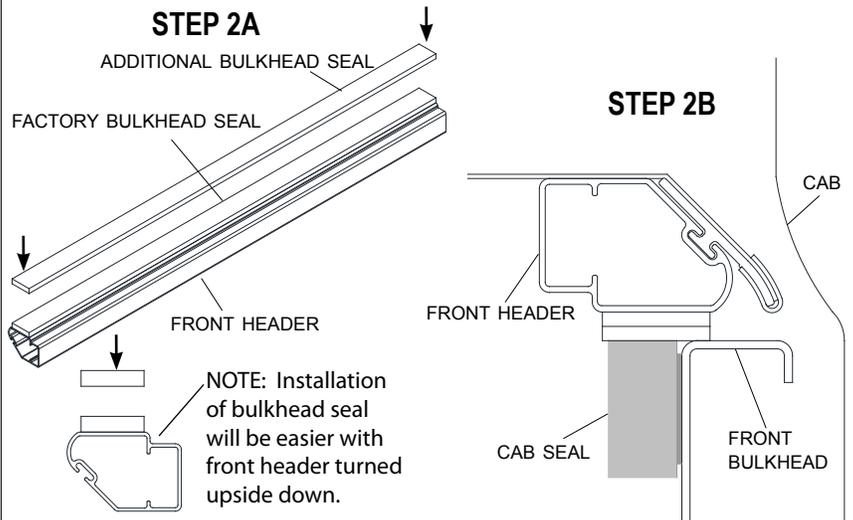

P/N 1116774 Rev. D