




NISSAN TITAN CLAMPING INSTALLATION INSTRUCTIONS

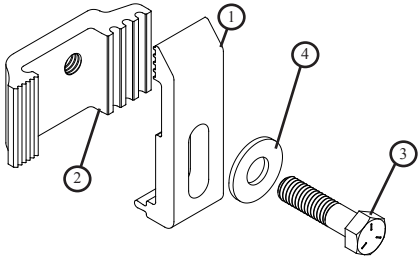

Item	Part #	Description
1.	1705569	MALE CLAMP
2.	1703481	FEMALE CLAMP
3.	1700369	CAP SCREW 3/8" X 1 3/4"
4.	1700429	FLAT WASHER 3/8"
	(1705588)	Clamp Assembly

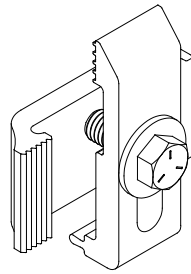


Clamp Position With Utility Track

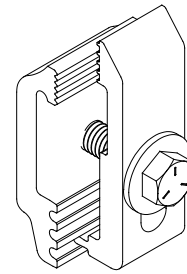


Clamp Position Without Utility Track

1 Insert female clamps, three per side, into utility tracks on Nissan bed rails.

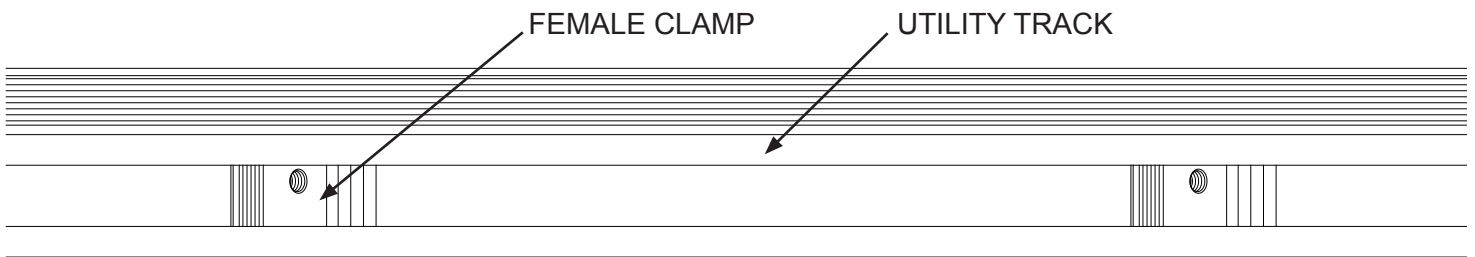


2 Evenly space and fasten male clamps loosely to female clamps with cap screws.

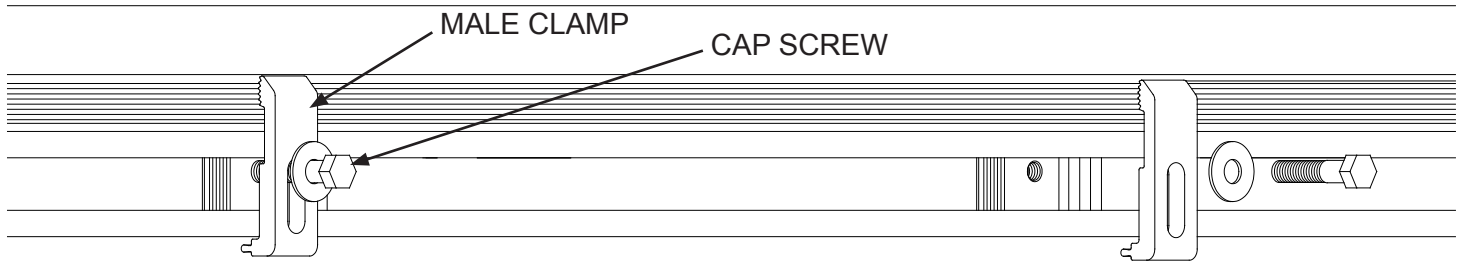

3 Install side rails, wedging rails between male clamp and bed rail. Refer to Owner's Manual for Side Rail placement.

Rail Lip sits on top of Bed Rail for Proper installation.

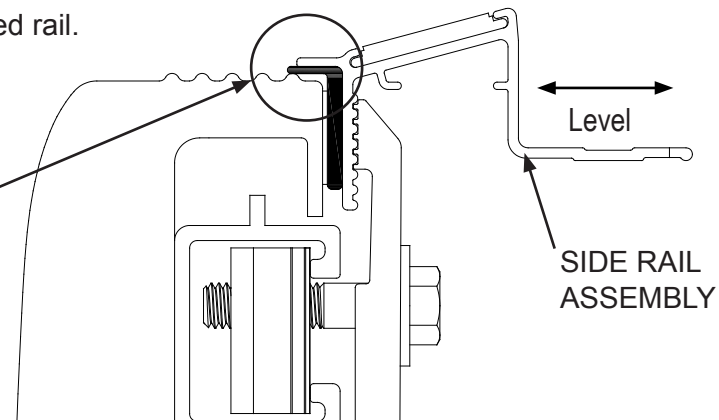

CAUTION

Tighten clamp assemblies securely on side rails before driving vehicle.