


NISSAN TITAN BED EXTENDER INSTALLATION

Follow these instructions to install a bed extender on your Nissan Titan pickup. Refer to Owner's Manual for complete installation instructions.


Tools Required:

Item	Part #	Description
1.	1703701	Nylon Lock Nut, 7/16"
2.	1703700	Cap Screw, 7/16" x 3/4"
3.	1703801	Cap Screw, Metric, M8 x 1.25 x 90mm
4.	1703699	Tube Spacer
5.	1700428	Flat Washer, 5/16"


5mm Allen Wrench
#5 Torx Wrench
#10 Torx Wrench
#20 Torx Wrench
10mm Hex Wrench
5/8" Wrench
11/16" Wrench

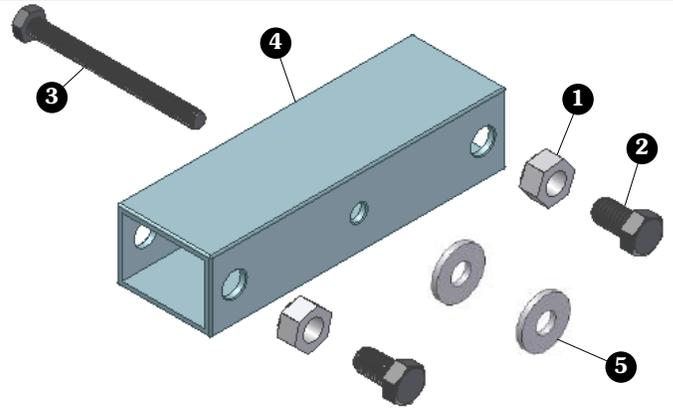


STEP 1: Adjust Width of Bed Extender Cage: Open tailgate and remove bed extender cage. Measure and record width of cage. Using a #20 torx wrench, loosen torx bolts from wedges. Pry wedges loose and slide tubes together, so that cage is 4" narrower than it was originally. Replace wedges and retighten torx bolts.

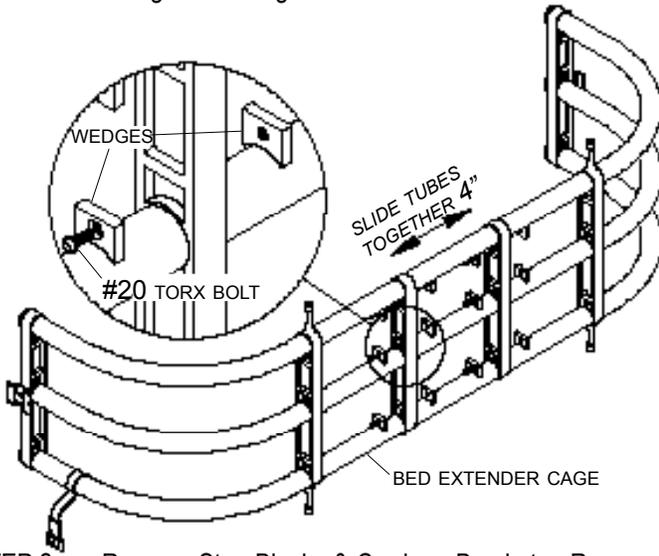


STEP 2: Remove Stop Blocks & Carriage Brackets: Remove stop blocks. Loosen thumb nut and remove carriage brackets from Utili-track channels.

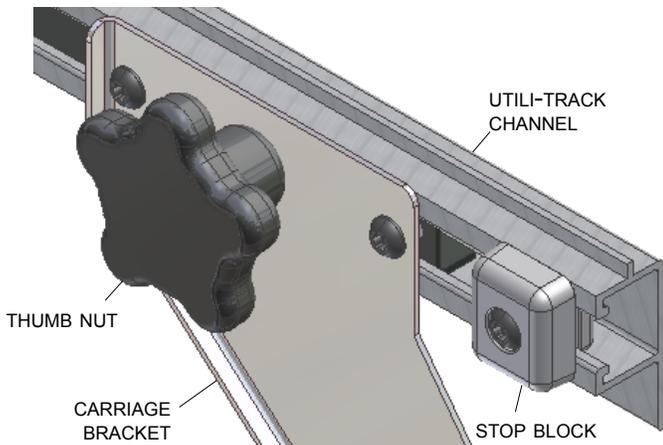


STEP 3: Install Spacers: Disassemble carriage brackets. Re-assemble as shown.

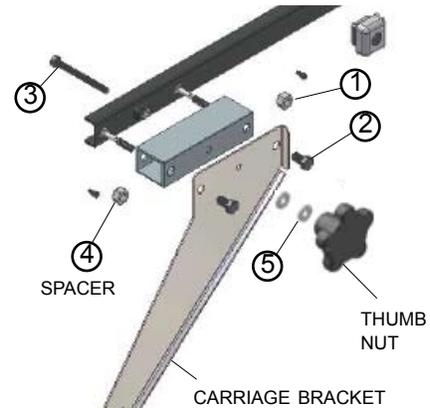

STEP 4: Replace Carriage Brackets: Slide carriage bracket assemblies into Utili-track channels. Re-install rear stop blocks and bed extender cage, following manufacturer's instructions.

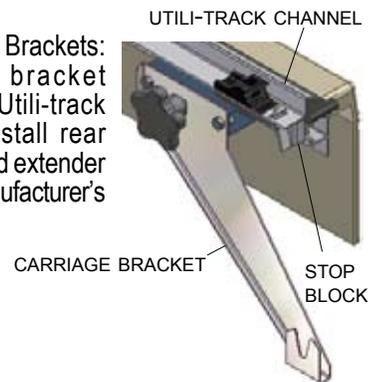

STEP 5: Final Adjustments: Rotate bed extender cage to rest on tailgate. Adjust length of safety strap and re-fasten to tailgate. Make sure all bolts are tightened, and bed extender operates correctly.

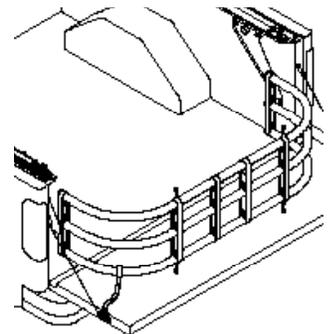

Truxedo, Inc.

P.O. Box 1078, 2209 Kellen Gross Dr., Yankton, South Dakota 57078

Call Toll Free: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304 Visit Us Online: <http://www.truxedo.com>

TRUXEDO

Lo-profile
Patented

P/N 1116308 Rev. A