



# TRUXEDO® LO PRO 2007 OR NEWER TOYOTA TUNDRA WITH TRAC SYSTEM INSTRUCTIONS

Item	Part #	Description
1.	1700428	Flat Washer, 5/16"
2.	1701208	Cap Screw
3.	1703888	Male Clamp
4.	1703889	Female Clamp
(1117056 Assembled Clamp)		

Refer to Owner's Manual for complete instructions.

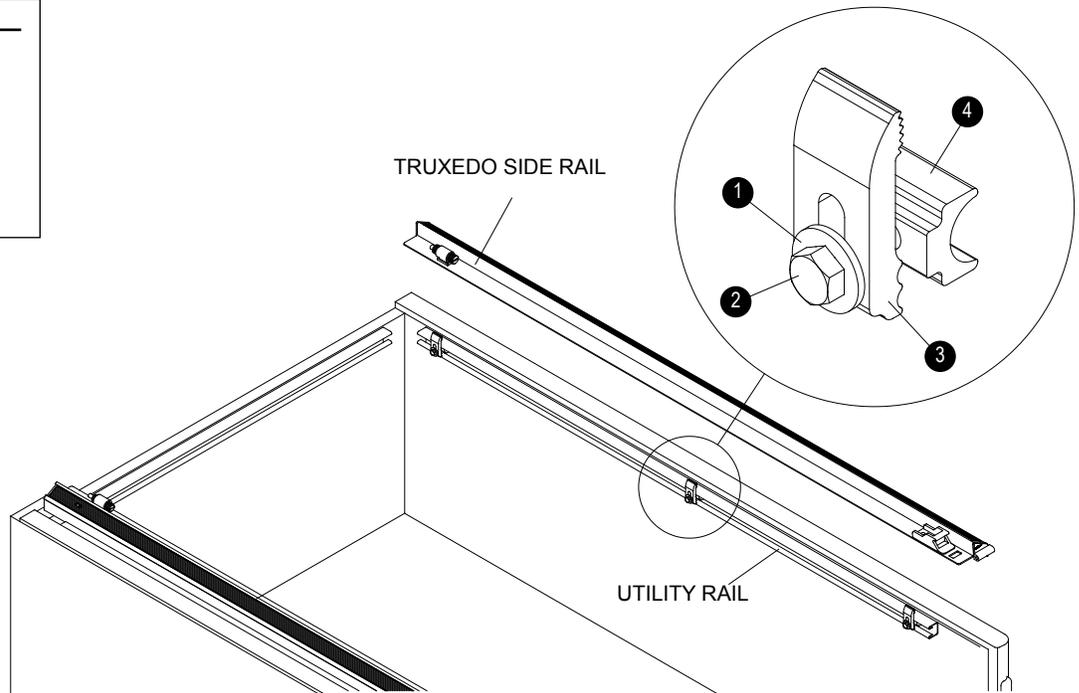


**STEP 1:** Insert clamp assemblies into utility rails, three on each side of pickup bed.

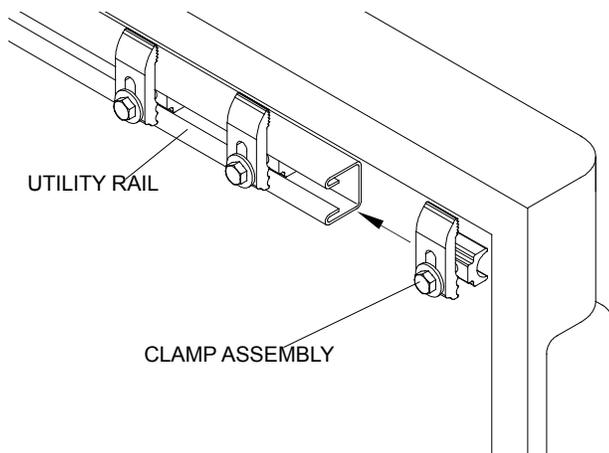

**STEP 2:** Evenly space 3 clamp assemblies along utility rail.

**STEP 3:** Refer to owner's manual for side rail placement.

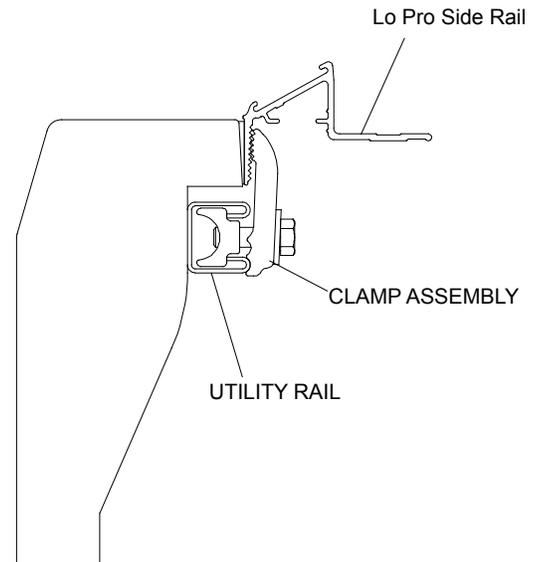

## ⚠ CAUTION

Tighten clamp assemblies securely on side rails before driving vehicle.

**NOTE:** See Owner's Manual for cover installation.

**TruXedo, Inc.**

P.O. Box 1078, 2209 Kellen Gross Dr., Yankton, South Dakota 57078

Call Toll Free: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304 Visit Us Online: <http://www.truxedo.com>

**TRUXEDO**  
Lo-Pro QT  
Patented

P/N 1117029 Rev. D