

## 

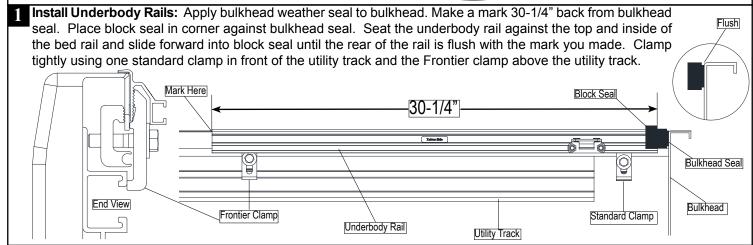

Install Underbody Rails: With the front part folded over, place the front end of the rear side rail flush to the rear of the underbody rail. Seat the rear side rail against the top and inside of the bed rail making sure the side rail seal is compressed. Clamp to pickup using one standard clamp behind the utility rail, and one Frontier clamp above the utility rail. Repeat steps 1-2 on Passenger Side.

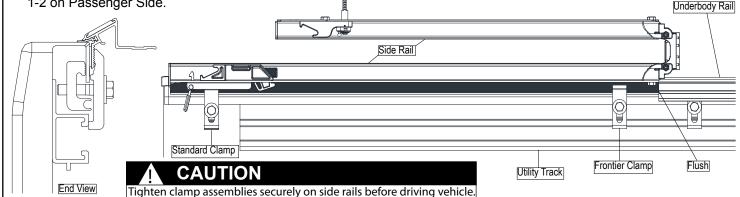

To finish installation, continue with step 4 in the Deuce 2 manual.



P.O. Box 1078, 2209 Kellen Gross Dr., Yankton, SD 57078 Phone: 877- 878-9336 • Fax: (605) 664-9304 www.truxedo.com

